## Eliminating Mid-Spatial Frequency (MSF) Errors with VIBE Finishing

J. Nelson, B. Light, R. Wiederhold, M. Mandina

Optimax Systems, Inc.
Ontario, NY
www.optimaxsi.com

Work funded by NASA Phase I SBIR

SBIR Data Rights

Order/Contract Number: NNX10CF20P

Expiration of SBIR Data Rights Period: June 7, 2016

The Government's rights to use, modify, reproduce, release, perform, display, or disclose technical data or computer software marked with this legend are restricted during the period shown as provided in paragraph (b)(4) of the Rights in Noncommercial Technical Data and Computer Software—Small Business Innovative Research (SBIR) Program clause contained in the above identified contract. No restrictions apply after the expiration date shown above. Any reproduction of technical data, computer software, or portions thereof marked with this legend must also reproduce the markings.

June 8, 2010 NASA Mirror Technology Days



### **Outline**


- Introduction
  - Mid-Spatial Frequency (MSF) Errors
  - VIBE Technology
- Characterization of MSF Errors
- MSF Error Removal with VIBE



## **Outline**

- Introduction
  - Mid-Spatial Frequency (MSF) Errors
  - VIBE Technology
- Characterization of MSF Errors
- MSF Error Removal with VIBE


### What is "mid-spatial frequency"?

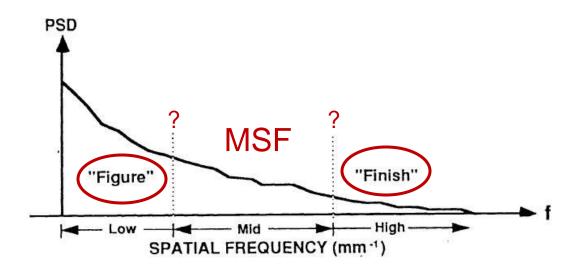

J.E. Harvey and A. Kotha, "Scattering effects from residual optical fabrication errors, Proc. SPIE 2576-25




## Figure is the range of spatial frequencies addressable with a simple Zernike expansion

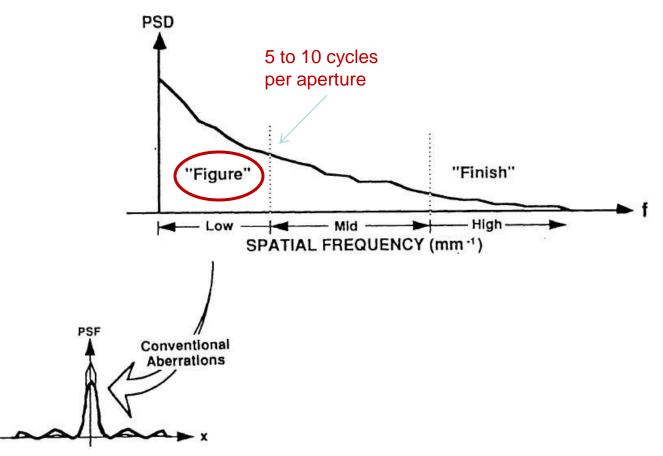

J.E. Harvey and A. Kotha, "Scattering effects from residual optical fabrication errors, Proc. SPIE 2576-25




## Finish (a.k.a "gloss" or "roughness") is typically less critical as it results in total transmission loss

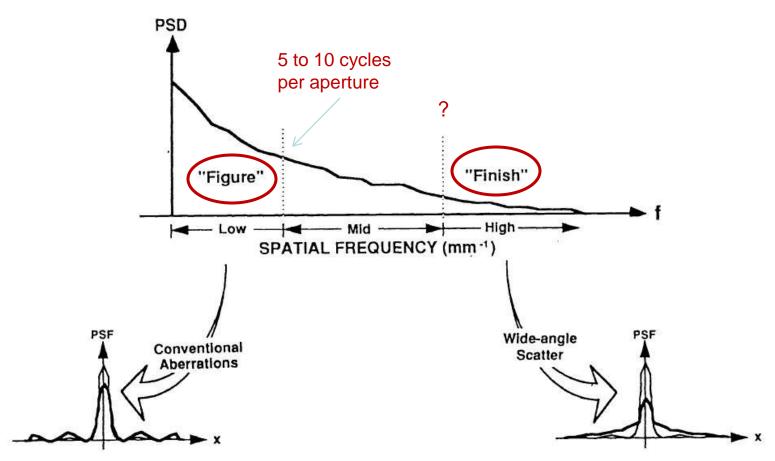

J.E. Harvey and A. Kotha, "Scattering effects from residual optical fabrication errors, Proc. SPIE 2576-25



## Mid-Spatial Frequency bandwith limits help to define the MSF itself

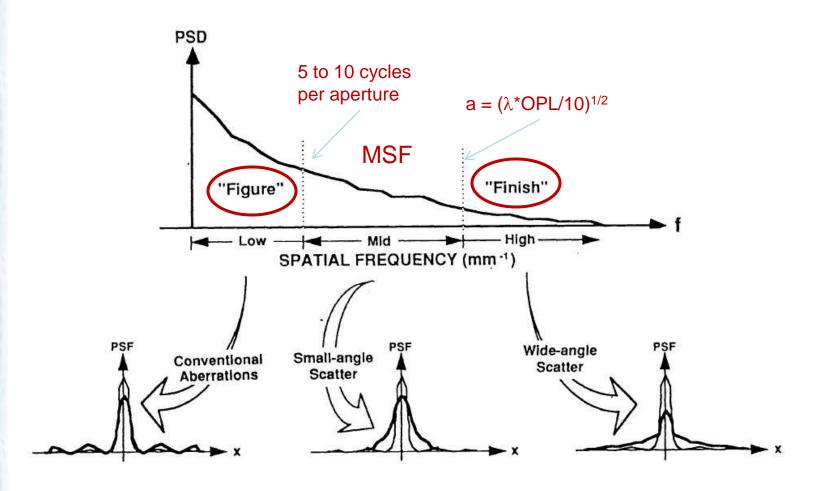


J.E. Harvey and A. Kotha, "Scattering effects from residual optical fabrication errors, Proc. SPIE 2576-25




### Example: Spoke and Spiral Errors

PV: 179.9nm RMS: 28.6nm

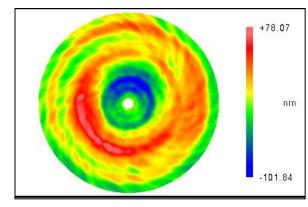


Unfiltered data

PV: 152.8nm RMS: 26.3nm

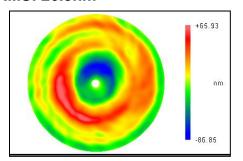


Low spatial frequency

PV: 41.9nm RMS: 4.8nm

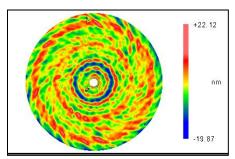

Mid-spatial frequency

PV: 17.1nm RMS: 0.6nm

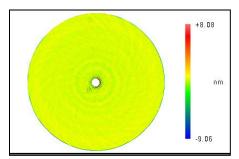

High spatial frequency



## VIBE Process is a high-pressure, highspeed, full aperture polishing process






# VIBE testing station provides platform for pad/slurry experimentation


VIBE removal rate studies

- In-process testing of polishing pads
- Variable pressure and speed

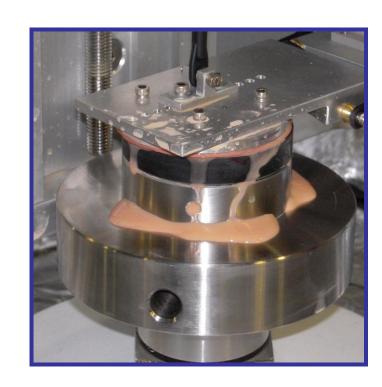




### VIBE linear motion with over-stroke

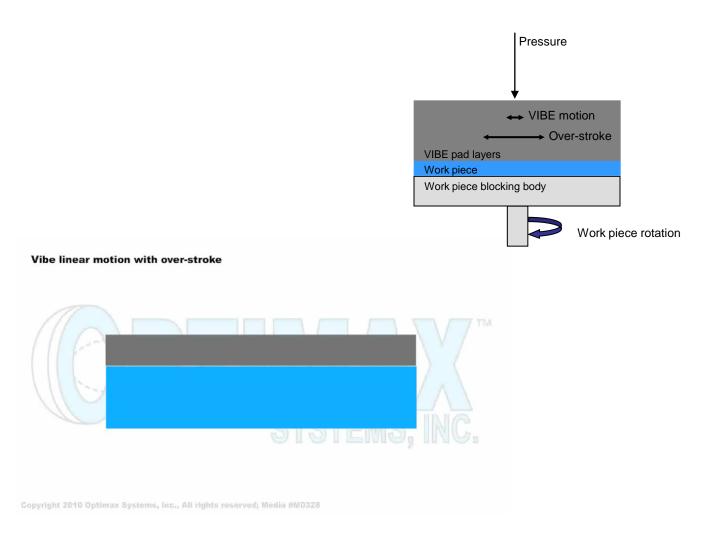

Animation speed and motion has been exaggerated for viewing purposes



# VIBE originally intended for pre-polishing glass spheres and aspheres

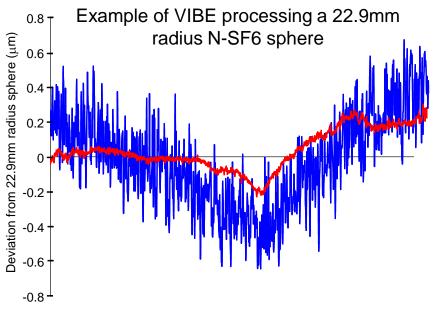



Initial 9T alumina ground surface

Areal surface roughness

P-V: 8517.6nm

RMS: 756.1nm



After 10 minutes of VIBE polishing

Areal surface roughness

P-V: 12.3nm


RMS: 0.7nm

### In just 10 minutes...

- Remove 10μm
- Improve surface figure
- Improve surface roughness by 100x



# The role of VIBE in modern optical manufacturing processes

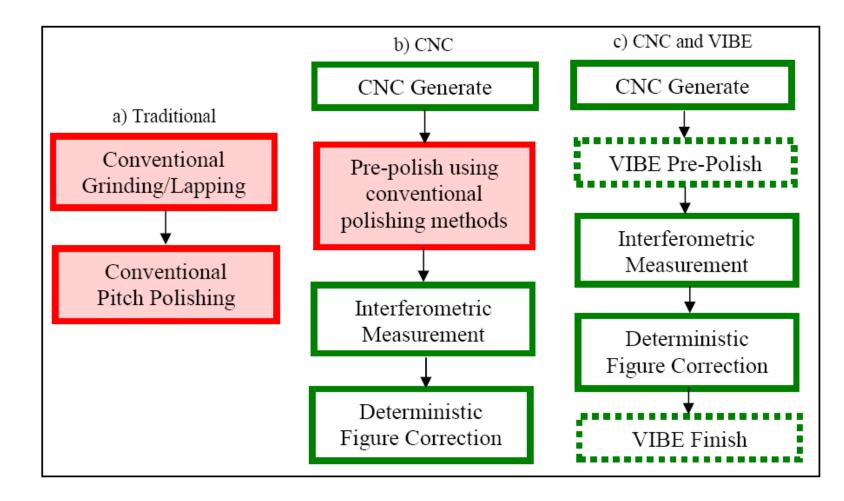





## **Outline**

- Introduction
  - Mid-Spatial Frequency (MSF) Errors
  - VIBE Technology
- Characterization of MSF Errors
- MSF Error Removal with VIBE




Implemented three different ways to visualize MSF errors

- Power Spectral Density
- Zernike Residual RMS
- Slope Error

## Power Spectral Density (PSD)


Deviation from straight line

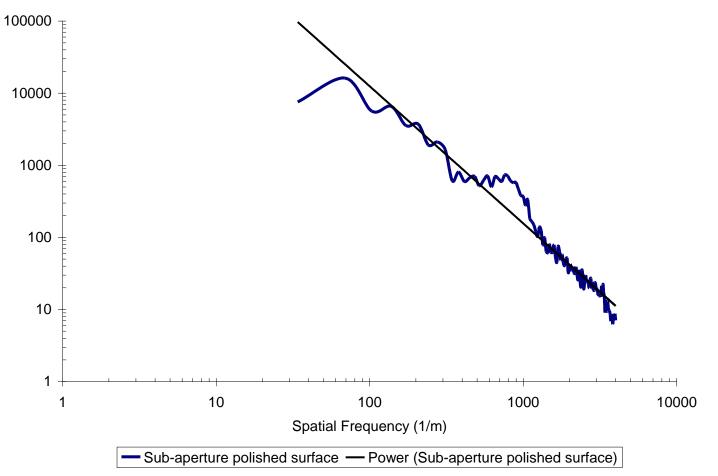



## Power Spectral Density (PSD)


Deviation from straight line

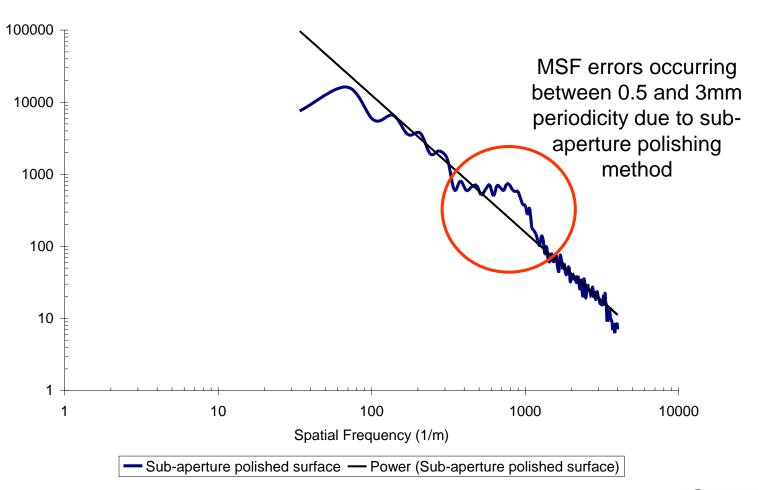



### Residual RMS and Slope data

### Implemented for initial inspection

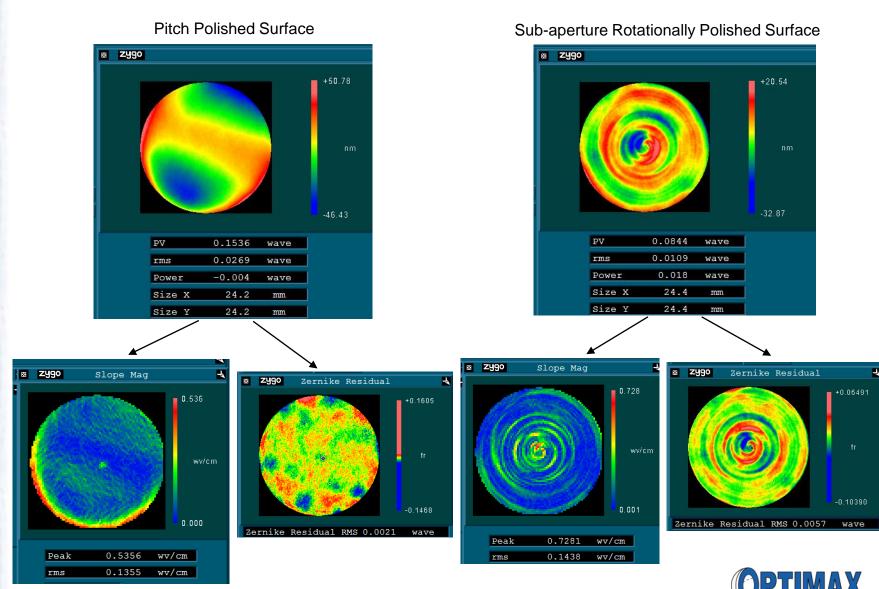




## **Outline**

- Introduction
  - Mid-Spatial Frequency (MSF) Errors
  - VIBE Technology
- Characterization of MSF Errors
- MSF Error Removal with VIBE


# Implementing VIBE to remove MSF errors

- Currently 4 months into Phase I
- Examining different compliant mediums to determine optimum polishing pad composition
  - Material
    - Borosilicate glass
    - Initial surface sub-aperture figure correction of plano surface
- Only remove nanometers of material
  - VIBE finishing step completed in less than 60 seconds

# We have examined many different types of compliant polishing pads with mixed results

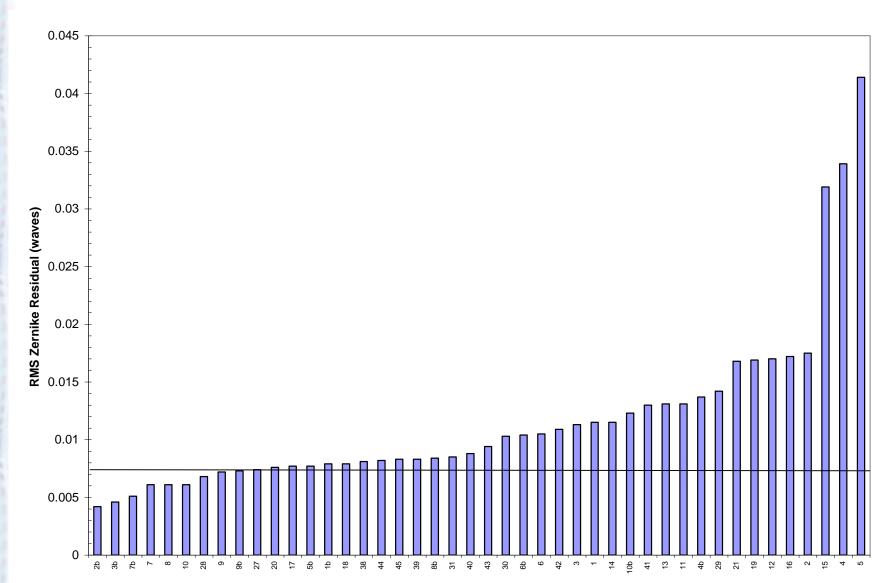


# We have been able to reduce the appearance of MSF errors with VIBE

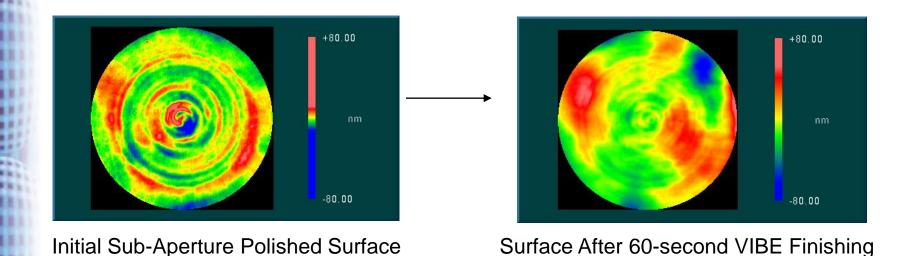



# PSD data shows that VIBE finishing can reduce MSF errors

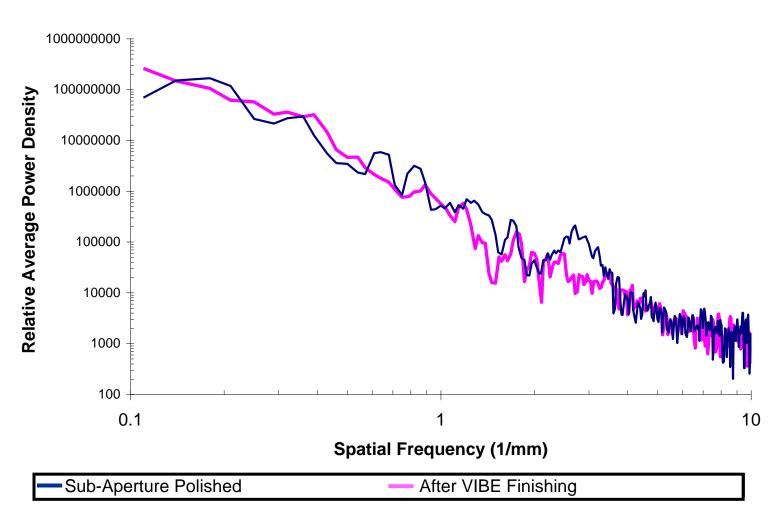



## Conclusions and Future Work

 VIBE finishing can reduce the appearance of MSF errors on flat rotationally polished surfaces

- Continued work on eliminating MSF errors
- Future work: extend technology to spheres, cylinders, aspheres and conformal optics

## Acknowledgements

- The authors would like to thank
  - Ron Eng, COTR (NASA)
  - Phil Stahl (NASA)
  - John Lehan (Univ. of Maryland)
  - Peter Blake (NASA)
  - NASA SBIR program for funding this work

Small Business Innovation Research

### **Eliminating Mid-Spatial Frequency Errors with VIBE**

## Optimax Systems, Inc. Ontario, NY

#### **INNOVATION**


The Optimax VIBE process is a full-aperture, conformal polishing process incorporating high frequency and random motion to *eliminate mid-spatial frequency (MSF) errors* created by deterministic polishing in a VIBE finishing step while maintaining low spatial frequency form accuracy.

### **ACCOMPLISHMENTS**

- Currently in Phase I SBIR Development Stage
- VIBE finishing has been shown to reduce the severity of MSF errors
- We have incorporated repeatable interferometric methods to characterize MSF errors

### COMMERCIALIZATION

- ◆ Optimax VIBE™ Technology
- U.S Patent Number 6942554 B1
- Primary target applications: Optical imaging systems where small angle scatter would reduce performance quality
- Optimax currently provides high precision optics to the aerospace, defense, medical and imaging markets, VIBE technology will enhance our capabilities
- Current customers are designing all spherical optical systems due to Asphere manufacturing limitations (MSF errors)
- ♦ MSF errors are formed during deterministic sub-aperture polishing processes. MSF errors cause small angle scatter and flare in optical systems.
  - ◆ VIBE Finishing will eliminate these undesirable MSF errors

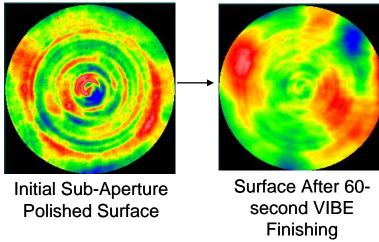

Sub-aperture polished surface before and after VIBE finishing

#### **GOVERNMENT/SCIENCE APPLICATIONS**

#### NASA:

- X-Ray Telescopes:
  - ◆ IXO slumping mandrels, produce surfaces less than 1.4nm rms between 2-20mm spatial frequency range.
- Exo-Planet Imaging Systems:
  - ◆ Minimize scatter on primary and secondary mirrors, specifically less than 1nm rms in 4-50 cycles/aperture range

#### Non-NASA:

 High Energy Laser Systems, EUV Optics (Lithography), Imaging Systems and X-Ray Synchrotron Optics

## Eliminating Mid-Spatial Frequency (MSF) Errors with VIBE Finishing

J. Nelson\*, B. Light, R. Wiederhold, M. Mandina

Optimax Systems, Inc.
Ontario, NY

www.optimaxsi.com

\*jnelson@optimaxsi.com

Work funded by NASA Phase I SBIR

SBIR Data Rights

Order/Contract Number: NNX10CF20P

Expiration of SBIR Data Rights Period: June 7, 2016

The Government's rights to use, modify, reproduce, release, perform, display, or disclose technical data or computer software marked with this legend are restricted during the period shown as provided in paragraph (b)(4) of the Rights in Noncommercial Technical Data and Computer Software—Small Business Innovative Research (SBIR) Program clause contained in the above identified contract. No restrictions apply after the expiration date shown above. Any reproduction of technical data, computer software, or portions thereof marked with this legend must also reproduce the markings.

